

Hot Shot™

Directions for use:

Battery comes fully charged. Battery life depends on conditions.

Note: Motor Mount screws may have become loose during shipping. Make sure the screws are tight before using.

Step 1: Unpack box and make sure all parts are present.

Parts include:

- 1 – Hot Shot Body w/motor and Battery Clamp
- 2 – Plastic Feet
- 2 – Wings
- 1 – 6 Volt Rechargeable Battery
- 1 – 6 Volt Charger
- 1 – 3pc Mounting Stake
- 5 – 1 3/8" Bolts
- 5 – Wing Nuts

Step 2: Insert battery into the battery clamp.

Step 3: Attach the red lead wire to the positive battery terminal and attach the black lead wire to the negative battery terminal.

Step 4: Replace the cross brace on top of the battery and secure with the wing nut.

Step 5: Close back flap and secure with attached elastic strap.

Step 6: Remove the black rubber covers from the leg bolts and discard. Slip the Hot Shot feet onto leg bolts with the feet thumbs pointing inward then slip the T-shaped mounting bracket over the leg bolts and secure with provided wing nuts.

Step 7: Attach the wings to the motor shafts by sliding the wing rod into the black plastic end cap. Be sure to align the notch on the wing rod with the center of the raised portion of the black plastic cap. The wing should snap in place.

Step 8: The 3pc pole has 3 different width sections. Connect the sections of the mounting pole by sliding each smaller diameter section of square tubing inside the next largest size tubing. Depress the spring button and slide together until they snap in place. You will need to pay attention to the hole in the mating tubing and align it with the spring button. Once snapped in place, secure in place with provided thumbscrew. Repeat for top T-shaped section. Edge recommends that you disassemble the pole back to 3 pcs after use. If used in a telescoping manner, dirt/debris or ice could get inside and cause the sections to not pull apart next time you want to use it.

Step 9: Turn the switch on and you are ready to go!

TO RECHARGE BATTERY

- 1: Open the back of the Hot Shot. Remove the lead wires from the battery. Connect the red clip on the charger to the red battery post and the black clip to the black battery post.
- 2: Plug other end of charger into wall outlet.
- 3: Charge until green light appears on charger. (Usually Overnight)

CARE AND MAINTENANCE

Hot Shot™ is not waterproof, NEVER Submerge Hot Shot™ in water!

- 1: Always charge the battery before storage. Failure to do so may result in battery damage or reduced run time.
- 2: Clean your Hot Shot™ using warm soapy water and a clean soft rag. Never use abrasives or harsh chemicals as this will damage the paint.
- 3: Store Hot Shot™ in a dry environment.
- 4: Always wipe Hot Shot™ dry after use.
- 5: Lubricate motor and shafts using WD-40 or a similar product, use sparingly. It is a good idea to lubricate motor and shafts especially before off-season storage.
- 6: Make sure switch is in off position when not in use. Failure to do so will drain the battery.

TROUBLESHOOTING TIPS

If your battery is only lasting 1-2 hours or less: Turn the wing shafts to see if there is a drag on the motor. Check all connections.

If motor will not run, check the 2amp fuse in the wiring harness.

Hot Shot™ Warranty

Your Hot Shot™ is a quality product, fully warranted against defects in materials or workmanship for a period of one year from the date of purchase. Faulty parts covered under this warranty will be replaced free of charge. If it becomes necessary to return your unit for repair, all shipments must be insured and prepaid to and from the warehouse. Your warranty request must be accompanied by proof of purchase. This warranty shall not apply if the unit has not been operated in accordance with assembly instructions and care and maintenance instructions. The warranty will be void if the machine has been altered, repaired or mistreated in any way that we believe has caused the failure or destruction of the unit.

REPLACEMENT PARTS LIST**PART NUMBER**

T-fitting for mounting pole	21-81218-T
Mounting Pole	21-81216-MT
Motor	21-81312-MO
Plastic Feet	21-81219-8F
Replacement Wings	21-81312-WG
Charger w/alligator clips	21-51235-7A
Battery	21-51135-0
Battery Bracket	21-51135-B

Any questions, please call EDGE at 1-715-381-2935 between 8:00 a.m. - 4:00 p.m. CST, or write to us at EDGE Innovative Hunting, 1201 Beaudry Blvd., Hudson WI, 54016. You can also email us at www.edgebyexpedite.com.

Look for other EDGE by Expedite products at your retailer or at www.edgebyexpedite.com.

Hot Shot™

By



www.edgebyexpedite.com

Licensed under one or more of the following patents: 6408559, 6508028, D469152