

Super Lucky Duck Combo Pack

THE PREMIER DIRECT DRIVE SYSTEM

Directions for use:

Battery comes fully charged. Battery life depends on conditions. Lucky Duck™ runs effectively for up to 12 hours on a single charge.

Note: Motor Mount screws may have become loose during shipping. Make sure the screws are tight before using.

Step 1: Unpack box and make sure all parts are present.

Parts include:

- 1 - Lucky Duck Body w/Motor, Battery Clamp and Remote Control
- 1 - Lucky Bag
- 2 – Plastic Feet
- 2 – Wings w/Thumbscrews
- 1 – 6 Volt Rechargeable Battery
- 1 – 6 Volt Charger
- 1 – 4pc Mounting Stake
- 5 – 1 3/8 “ Bolts
- 5 - Wing Nuts

Step 2: Insert battery into the battery clamp.

Step 3: Attach the red lead wire to the positive battery terminal and attach the black lead wire to the negative battery terminal.

Step 4: Replace the cross brace on top of the battery and secure with the wing nut.

Step 5: Close back flap and secure with attached elastic strap.

Step 6: Remove rubber feet bolt protectors and discard. Slip Lucky feet onto ankle bolts then to Lucky top pole section (“T” shaped section) and tighten with wing nuts.

Step 7: Attach the wings to the motor shafts using the enclosed thumbscrews. Make sure the thumbscrews fit into the flat groove in the wing shaft. It may be necessary to tighten thumbscrews with a pliers to ensure a secure fit.

Step 8: There are 3 different width tubing sections that make up the 3pc pole. Assemble the mounting pole by sliding each smaller diameter section of square tubing inside the next largest size tubing. Depress the spring button and slide together until they snap in place. You will need to pay attention to the hole in the mating tubing and align it with the spring button. Once snapped in place, secure in place with provided thumbscrew. Repeat for top T-shaped section. Edge recommends that you disassemble the pole back to 3 pcs after use. If used in a telescoping manner, dirt/debris or ice could get inside and cause the sections to not pull apart next time you want to use it.

Step 9: Turn switch on and you are ready to go!

Note: Lucky Duck™ has a 3 position switch.
Front Position: ON, Constant Operation
Middle Position: OFF
Back Position: RF – Remote Function

Note: Do not disconnect the remote receiver from Lucky Duck. If this is done, the motor will not run.

TO RECHARGE BATTERY

- 1: Open the back of the duck, place the red(+) alligator clip on the positive battery terminal. Place the black(-) alligator clip on the negative terminal. It is not necessary to remove the battery contacts before charging.
- 2: Plug other end of charger into wall outlet.
- 3: Charge until green light appears on charger. (Usually Overnight)

CARE AND MAINTENANCE

Lucky Duck™ is not waterproof, NEVER Submerge Lucky Duck™ in water!


- 1: Always charge the battery before storage. Failure to do so may result in battery damage or reduced run time.
- 2: Clean your Lucky Duck™ using warm soapy water and a clean soft rag. Never use abrasives or harsh chemicals as this will damage the paint.
- 3: Store Lucky Duck™ in a dry environment.
- 4: Always wipe Lucky Duck™ dry after use.
- 5: Lubricate motor and shafts using WD-40 or a similar product, use sparingly. It is a good idea to lubricate motor and shafts especially before off-season storage.
- 6: Make sure switch is in off position when not in use. Failure to do so will drain the battery.

REMOTE CONTROL PROGRAMMING/TROUBLESHOOTING

- 1) The Remote control that comes with this product is pre-programmed at the factory. If for some reason, your remote does not communicate with your decoy, follow the steps below to re-program the remote key fob.
- 2) Carefully remove the 4 screws the hold the cover on the receiver box inside the duck body, exposing the circuit board.
- 3) With wings removed, turn the decoy **on** (RF position) and press and hold the K1 key. See illustration below. With the K1 key depressed, press the button on the remote control until the Receiver's Red LED is lighted.
- 4) Release the K1 key and the remote button and the Red LED will turn off. Replace the cover and 4 screws and you are ready to use the remote control.

5) If you have more than 1 decoy you want to control with the same Key fob, use this process with each of the decoys and they will all work with the same key fob.

**Important note:
Decoy switch must be set to RF mode(back position) for this to work**

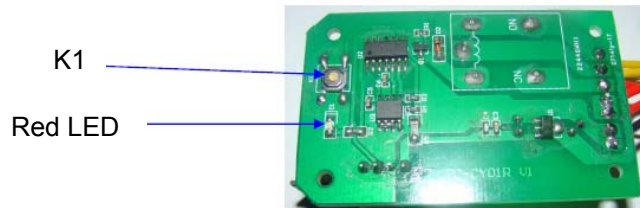

Receiver

TROUBLESHOOTING TIPS

If your battery is only lasting 1-2 hours or less: Turn the wing shafts to see if there is a drag on the motor. Check your charger port for corrosion. Check all connections.

Lucky Duck™ will not run when charger is plugged in to charger port.

If your charger light turns green shortly after plugging in: Check the charger port for corrosion. Check wiring harness for corrosion.

If motor will not run, check the 2amp fuse in the wiring harness.

Any questions, please call EDGE Innovative Hunting at 1-715-381-2935 between 7:30 a.m. - 4:00 p.m. CST, or write to us at EDGE Innovative Hunting, 1201 Beaudry Blvd, Hudson WI 54016.

Look for other EDGE Innovative Hunting products at your retailer or at edgebyexpedite.com.

Lucky Duck™ Warranty

Your Lucky Duck™ is a quality product, fully warranted against defects in materials or workmanship for a period of one year from the date of purchase. Faulty parts covered under this warranty will be replaced free of charge. If it becomes necessary to return your unit for repair, all shipments must be insured and prepaid to and from the warehouse.

Your warranty request must be accompanied by proof of purchase.

This warranty shall not apply if the unit has not been operated in accordance with assembly instructions and care and maintenance instructions. The warranty will be void if the machine has been altered, repaired or mistreated in any way that we believe has caused the failure or destruction of the unit.

Super Lucky Duck Combo Pack



www.edgebyexpedite.com

Licensed under one or more of the following patents: 6408559, 6508028, D469152