

Triple Play Motion Doves Instructions

Congratulations! on the purchase of your new Triple Play Motion Doves decoy system. We hope that you enjoy many years of success from purchasing this product. Soon, you will be hunting with Edge!


To assemble your Triple Play Motion Dove system, carefully remove the contents of the package.

You will have the following components:


1. (3) dove decoy bodies
2. (3) removable decoy actuating arms
3. (1) base hub
4. (1) Dove-n-Air adapter rod. (Used to add in the Dove-n-Air dove decoy. Mounts in the center.) Dove-n-Air sold separately. Check your local retailer or our website.

To assemble the decoy, follow the simple steps below.

- 1) Turn the base hub upside down exposing the battery cover. Remove the battery cover and install (4) AA batteries. Negative battery terminal faces the spring. Battery orientation is also molded into the inside of the battery box for reference. Replace the battery cover.
- 2) In the field, you will press the spikes on the bottom of the base into the ground in a desired location.
- 3) Install the 3 wire arms as indicated in the photos below.. They simply snap into the base.

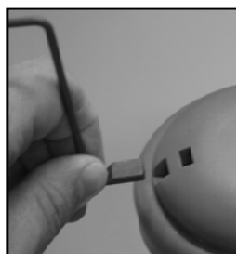

- 4) Place the (3) dove bodies on the end of each arm. There is a hole in the chest of the dove. You just simply slide the hole in the chest over the end of each arm. Fully assembled it should look like the image below.

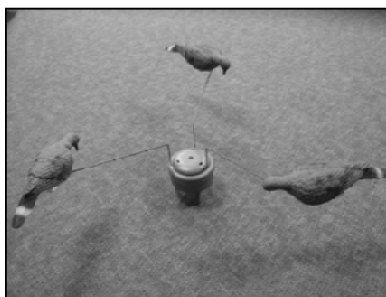

- 5) Turn the ON/OFF switch to the ON position and start hunting.
- 6) Edge by Expedite warranties this product from Manufacturer's defects for a period of 1 year from the date of purchase. You will need to provide your proof of purchase in the event that you need a replacement due to warranty issues. This warranty does not cover damage from misuse or abuse to the product and only covers problems directly related to manufacturing defects.



906 Dominion Drive
Hudson WI 54016

Customer Service Call 715-381-2935
www.edgebyexpedite.com